

pc^o.dimax[®]cs

high-speed camera series



pc^o.dimax cs1
pc^o.dimax cs3
pc^o.dimax cs4



excellent
light sensitivity

12-bit
dynamic range

**compact &
shock resistant**

2128 fps
@ Full HD resolution



high performance for
car safety applications

pc^o.

the high-speed camera series for all demands



sled



onboard



offboard

The **pco.dimax cs** models are the company's latest addition to its high-speed camera family, which has been specifically designed for the demanding applications in car safety. With very high frame rates at a resolution of up to 4 Megapixels it provides magnificent light sensitivity, leading image quality and excellent color rendering.


The automotive testing sector will benefit from the variety of security features, making it ideally suited for harsh conditions appearing in applications such as crash tests or other industrial scenarios. Crashworthiness as well as compact design make the camera a true all-rounder for both, the onboard and off-board use. Individual demands can be met by a broad variety of optional but helpful accessories such

as electronic lens control for positions difficult to access, junction boxes for the use of multiple cameras or a lens cage for stabilizing the optical axis when using larger C-mount lenses.

In addition to these progressive technical specifications, the user can ease the flow of work by the automatic black referencing feature and an HD-SDI monitor connected to the associated video output for easily setting image section, aperture and focus of the lens. Last but not least, a software custom-made for controlling the camera rounds out the camera's great flexibility. This allows the user to put his focus on other things, while the camera is acting as an highly automated device in its daily routine.

pco.camware 4 is an application-oriented camera control software allowing for

- controlling multiple cameras
- clear arrangement and ease of use
- storable and reloadable camera and test settings
- burned-in time stamp with editable text
- low light preview function
- fluent live images of all cameras
- easy playback and video export of recorded sequences

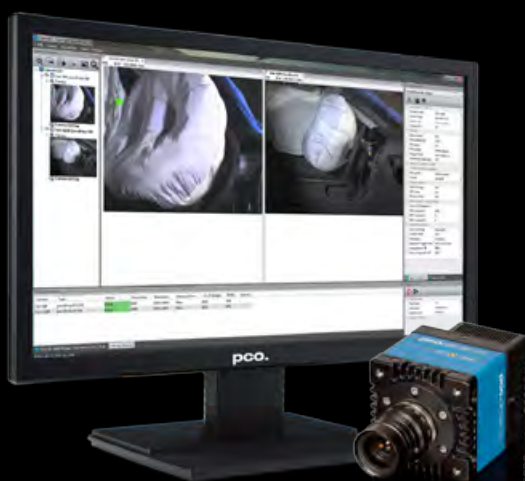

frame rate table

resolution [pixels] frame rate [fps] recording time (9 GB)

cs4	2016 x 2016	1102	1.40 s
	2016 x 1536	1443	1.40 s
cs3	1920 x 1440	1603	1.41 s
	1920 x 1080	2128	1.42 s
	1440 x 1440	2032	1.49 s
cs1	1296 x 1024	3086	1.53 s
	1296 x 720	4346	1.54 s
	1008 x 952	4009	1.63 s
	864 x 848	5010	1.71 s
	528 x 528	10782	2.08 s

Performance examples. Regions of interest can be individually set by users.



pco.dimax cs1
resolution 1296 x 1024 pixels

pco.dimax cs3
resolution 1920 x 1440 pixels

pco.dimax cs4
resolution 2016 x 2016 pixels



technical specifications



image sensor

Image Sensor	Proprietary
Resolution	cs4 2016 x 2016 pixels cs3 1920 x 1440 pixels cs1 1296 x 1024 pixels
Sensor size / diagonal	cs4 22.18 x 22.18 mm ² / 31.36 mm cs3 21.1 x 15.8 mm ² / 26.4 mm cs1 14.26 x 11.26 mm ² / 18.17 mm
Pixel size	11 x 11 µm ²
Shutter mode	Global Shutter
Fullwell capacity	36 000 e ⁻
Quantum efficiency	50% @ peak
Sensitivity (ISO ¹)	ISO 1250 - 16000 (monochrome) ISO 160 - 6400 (color)
Spectral range	290 ... 1100 nm
Readout noise	22 e ⁻ (typ.) 18 e ⁻²
Dynamic range	1600 : 1 / 64 dB 2000 : 1 / 66 dB ²
Dark current	530 e ⁻ /pixel/s @ 20°C
Non-linearity	< 0.5% (diff.), < 0.2% (integr.)
DSNU	< 0.6 counts rms
(dark signal non-uniformity)	@ 90% center zone
PRNU	< 1% @ 80% signal
(photo response non-uniformity)	

camera values

Exposure time	1.5 µs ... 40 ms
Dynamic range A/D	12 bit
Region of interest	24 x 4 pixel steps (centered)
Camera memory	9 Gigabytes
Signal types	RS-485, TTL, contact ³
Output signals	Status exposure / Status busy
Multi-camera sync	Sync In/Out (Master/Slave), PLL
Data interface	Gigabit Ethernet
Time stamp	in image (accuracy of 1 µs)
Time code input	IRIG-B unmodulated (optional)
Interframing time	3.58 µs (optional)
Shock	150g > 11ms (in all axes)
Operating temperature	0° - 40°C
Housing	self-contained housing
Power supply	15 - 48 V DC
Power consumption	27 W
Camera connector	LEMO (18-pin)
Available lens mounts	C-mount / F-mount, EF-mount (optional)
Weight	0.985 kg
Dimensions	85 x 85 x 102.5 mm ³

¹ Determination of ISO speed according to ISO 12232.

² In correlated double image mode (CDI) the readout noise is reduced and therefore the intrascene dynamic is improved.

³ Contact signal type in combination with **pco.**extension box.

qualities



fast frame rates at high resolution

1102 fps | 2016 x 2016 pixels **pco.dimax cs4**
1603 fps | 1920 x 1440 pixels **pco.dimax cs3**
3086 fps | 1296 x 1024 pixels **pco.dimax cs1**



excellent light sensitivity at true 12 bit dynamic range

outstanding low light performance requires less light and allows for reduced shutter time in order to avoid motion blur



ruggedized camera body

camera withstands 150g for more than 11 milliseconds in all axes
self-contained & dust tight housing



compact & lightweight

very compact and lightweight body allowing for quick and easy setup even in tight spaces



secure and smart operation

employable pulse length filter reduces risk of false triggering by interfering EM signals
secure synchronization mode (phase-lock PLL) even if sync signal fails



high data security

optional battery secures image memory for 45 minutes in case of power failure



electronic lens control for Canon EF lenses

allows for remote control camera lens (focus and aperture) for use in positions that are hard to access (film pit, hall ceiling, crash block)



ALL IN ONE

one camera for every application

due to size, weight and changeable lens mounts, the camera can be quickly swapped between onboard and off-board positions delivering high-quality images



wide variety of helpful accessories

camera-lens cage for perfect stabilization of the optical axis for onboard applications
ruggedized junction box with integrated battery and sync generator for multiple cameras



use-oriented camera control software

pco.camware 4 allows for fast repeatability of different test scenarios
integration in several major third-party camera control software packages



high-quality product made in Germany

robust and reliable camera system combines German engineering with outstanding color quality and crisp images

accessories

HD-SDI video output

The camera's video output provides fluent live video in Full HD quality which allows to easily set camera view, focus and aperture.



lens remote controller

The optional Canon lens controller enables the user to connect electronic EF- and EF-S Canon lenses allowing to remote control focus and aperture of those lenses.

lens cage

The supportive lens cage perfectly stabilizes the optical axis when working with larger C-mount lenses in high-G applications where strong cross acceleration forces occur.



camera junction box

The camera junction box is the perfect source for up to six off-board cameras providing power, Ethernet, trigger and sync signals via one solid LEMO cable.




onboard controllers

Different ruggedized onboard controllers supply up to ten cameras with power, Ethernet, trigger and sync signals. An integrated battery provides an ideal back-up power source.



dimensions

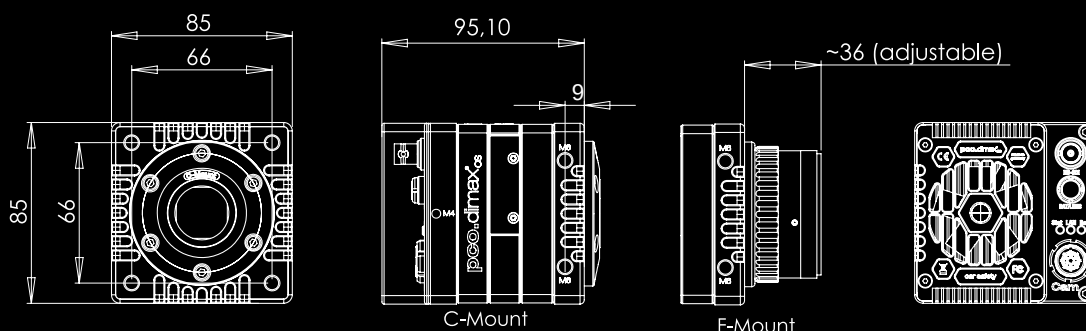

find us

europe

PCO AG
Donaupark 11
93309 Kelheim, Germany

fon +49 (0)9441 2005 50
fax +49 (0)9441 2005 20
info@pco.de
www.pco.de

america

PCO-TECH Inc.
6930 Metroplex Drive
Romulus, Michigan 48174, USA

fon +1 (248) 276 8820
fax +1 (248) 276 8825
info@pco-tech.com
www.pco-tech.com

asia

PCO Imaging Asia Pte.
3 Temasek Ave
Centennial Tower, Level 34
Singapore, 039190

fon +65-6549-7054
fax +65-6549-7001
info@pco-imaging.de
www.pco-imaging.de



TII 東京インスツルメンツ
TOKYO INSTRUMENTS

本社: 〒134-0088 東京都江戸川区西葛西6-18-14 T.I.ビル ☎03-3686-4711
大阪営業所: 〒532-0003 大阪府大阪市淀川区宮原4-1-46 新大阪北ビル ☎06-6393-7411
🌐 <https://www.tokyoinst.co.jp> ✉ sales@tokyoinst.co.jp

TII Group Company – グローバルにネットワークを広げ、最先端の科学をお客様に提供 –

UNISOKU
TII Group

超高真空・極低温走査型プローブ顕微鏡
高速分光測定装置、クライオスタット

LOTIS TII

Nd:YAGレーザー、Ti:Sレーザー
OPOレーザー

SPÉCS™-TII

Enviro ESCA (準大気圧XPS)
ARPESなど